

PAGE/PARTY INTERCOM OPERATION.

1) To call a person.

Go to the nearest intercom station, lift the handset, press the Page button → (press bar located into the handset, see picture) and call the desired person.

This call will be heard over all installed loudspeakers.

Release the Page button and wait until the desired person lifts a handset.

Start to communicate by now like a normal telephone type communication. (Full duplex, no need to press any button)



2) To answer a call.

Simply go to the nearest intercom station, lift the handset and start to communicate.

(In case of 5-party line system, first select the requested party line using the front selector switch)

A third (or more) person may hook off a handset at the same time and join the communication.

Outdoor station.



Model 730-104

Model 473-001

(External paging speaker not shown)

Indoor stations



Model 700-102

(External paging speaker not shown)



Model 472-001