

TALK BACK INTERCOM OPERATION.

A) From the master station.

1) To call a fieldstation.

- Select a field station by pushing on the corresponding selection button (See picture). A red LED will glow up confirming your selection.
- Push the " TALK " button and speak.
- Release the " TALK " button and listen.



2) To answer a call.

- An incoming call will be announced by an acoustic tone and a red flashing LED, showing the location of the calling station.
- Push the button with the flashing LED. You will hear the calling station.
 - Push the " TALK " button and speak.
 - Release the " TALK " button and listen.

B) From a field station.

- Push the " CALL " button in order to call the master station. Wait until you hear an answer and speak hands free. The speech direction is driven by the master station.

Master station.



Model PC2010/AX/MIC-GOS

Field stations



Model PR-96018/EX



Model PSE-1